 


INSTRUCTION MANUAL



THANK YOU FOR CHOOSING OUR ELECTRIC APPLIANCE
PLEASE READ THE MANUAL CAREFULLY BEFORE OPERATING

Description

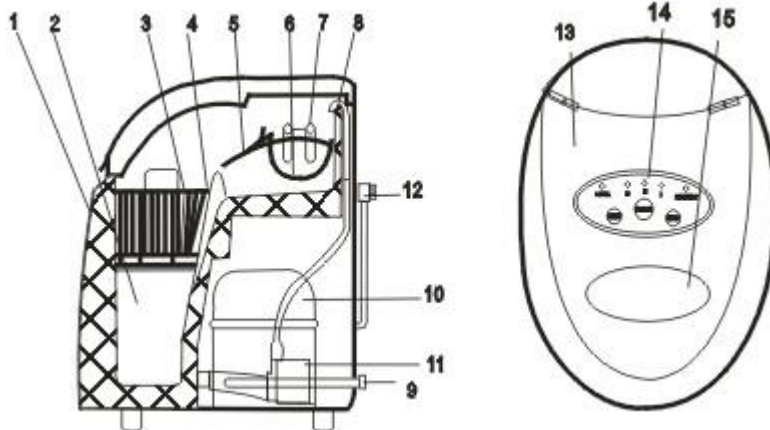

- | | |
|------------------------|---------------------|
| 1. Inner Liner | 9. Water Drain Plug |
| 2. Water Reservoir | 10. Compressor |
| 3. Ice collecting Tray | 11. Water Pump |
| 4. Ice Bin Full Sensor | 12. Power Cord |
| 5. Ice Shovel | 13. Lid |
| 6. Water Tray | 14. Control Board |
| 7. Evaporator | 15. Window |
| 8. Water Inlet Tube | |

Specifications

Daily Ice Output :	12-15kg / 24 hours
Ice Sizes Three (3):	small, medium, large
Ice Storage Capacity :	600 g
Compressor High efficiency CFC free	R134a
Mass of the refrigerant:	85g
Water Reservoir Capacity :	2.0 Litres
Dimensions:	W340 x D410 x H365 mm
Unit Weight Net	13Kg
Voltage:	AC 220-240V / 50Hz
Power cord:	3 pins grounded plug.

 
Function

Instant making ice
3 different ice size
Ice full alarming,deficient water alarming
Crystalline ice bullet warhead
12pcs of ice cube in 10mintues

Before/First Use of Your Ice Maker

- During transportation, the incline angle of the cabinet should not be over 45°c .Do not turn the Ice maker upside down. Problems could occur in the compressor and sealed system.
- Remove all packing material and please check carefully overall of your ice maker in Good condition.It must no breakage on the unit and no damage on the cord/plug.
- The Ice maker should be placed horizontally on a properly leveled surface.To ensure proper ventilation for your Ice maker allow 150mm of space at the top, the back and on each side. Please do not install the Ice maker near an oven, radiator, or other heat source.
- Before using the Ice maker for the first time, please wait 2 hours after positioning it.
- You must confirm that the voltage indicated on the ice maker is corresponded with the voltage in your home.

Control Panel Operation

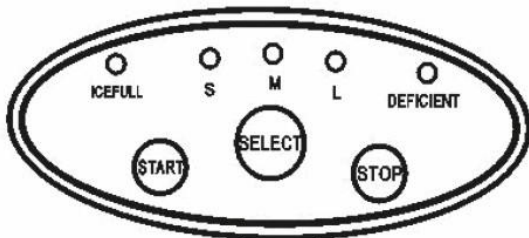

START :Press to turn unit on. This button is also used to start the ice making cycle.

STOP: Press to turn unit off.

SELECT: Ice size selection (S) small, (M) medium or (L) large. (The selected mode shall stay as selected unless changed or there is a power failure) The default setting is medium.

DEFICIENT:This light will come on with long noise 'DI'. You will need to add water and press the 'STOP' then the 'START' button to restart the Ice maker.

 
ICEFULL:This light will come on with 'DI, DI' when the ice has reached the maximum capacity of the storage cabinet. Press button 'STOP' then press button 'START' to restart the Ice maker after some of the ice has been taken away.

Operating Instructions

STEP 1.

Open the lid and fill the water reservoir with water.

Note: Make sure the water level in the water reservoir is not over the Ice collecting tray.

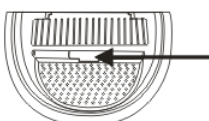

The sensor of temperature

STEP 2.

Connect to the power.

STEP 3.

Select desired ice cube size by pressing 'SELECT'

Note: Please select the (S) when ambient temperature is below 15°C. When the ambient temperature is higher than 30°C, Large ice cube sizes are recommended.

STEP 4

Press 'START' button to turn unit on. The ice maker begins to work.

STEP 5

If indicator 'DEFICIENT' is in red with noise 'DI', then take out the basket first, then add water same as step 1.

STEP 6

If indicator 'ICEFULL' is in red with noise 'DI DI', please take out the ice with the scoop.

Note: When the ice collecting tray is full please remove the ice immediately, Do not allow the ice collecting tray to overflow.

You must press 'STOP' then the 'START' button to restart the ice maker after you add water or take out some of the ice.

STEP 7

Press 'STOP' button to stop the machine.

STEP 8

Remove the drain plug to drain remaining water from the water reservoir. Screw the drain plug back in place after the water has been drained.

Caring

- Clean the inner liner, ice collecting tray, water box, ice shovel and evaporator frequently. When cleaning, unplug the unit and remove the ice cubes. Use a diluted solution of water and vinegar to clean the inside and the outside surface of the Ice maker. Do not spray Ice maker with chemicals or diluted agents such as acids, gasoline or oil. Rinse thoroughly before starting.
- Keep ventilation openings in the appliance enclosure, or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- If the machine is reused after a long time, maybe the water pump cannot pump sufficient water due to the air inside, the deficient water indicator turns on in this case. To correct this press the START button again, then the machine will work normally.
- To ensure the cleanliness of the ice cubes, water in the water reservoir should be replaced every 24 hours.
- If the compressor stops for any reason such as water shortage, too much ice, power off, etc... Do not start the system right away, wait 3 minutes, and then re-start the Ice maker.
- Always change with fresh water before starting ice production at initial installation or after long shut-off periods.

Troubleshooting

1. Please note, if a power failure occurs due to disconnection of the power cord, or the off power button has

been pushed off during an ice making cycle, small ice chips may be formed and may lodge in the automatic shovel causing it to jam. If this occurs, the ice chips may be removed by disconnecting the power cord and gently pushing the shovel to the rear of the cabinet and removing the ice chips, then restarting.

2. Please restart the ice maker by pressing the button STOP and then Start. If the Ice shovel does not push the Ice into the Ice collector after the formed Ice dropped from the evaporator finger and at the same time the M light is twinkling, then check to see if the water tray is horizontal or balanced , if not then adjust by pressing the Ice shovel lightly with your finger. Then re-start the Ice maker.

Problem	Possible Cause	Suggested Solutions
The compressor works abnormally with a Buzzing noise	The voltage is lower than recommended	Stop the Ice maker and do not restart until the voltage is normal.
Water shortage indicator light is on	There is no water	Press the stop button, fill with water, wait 3 minutes and press the start button to restart. Or when the water has reached the fill line the ice maker will restart automatically.
Indicator light on display are not on	Blown fuse/ No power	Replace fuse / Turn power on
The Ice made is too large and with pieces sticking together.	The water temperature in the water storage box or ambient is too low	Stop the machine and reset the ice making cycle. Restart the machine after turning it off.
Conditions For Ice making Cycle are right but no ice is made.	Refrigerant leaks./ Sealed system is blocked	call for service
The lights of ice full and deficient come on in the same time.	Water tray is blocked by ice cube	Clear the ice cube under the ice shovel to pull out the plug and insert It again then press the "START" button, two minutes later the machines will restart automatically

WARNING

.If the supply cord is damaged; it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

. Fill only with water.

. It is normal for the compressor and condenser surface to reach temperatures between 70°C and 90°C during operation and surrounding areas may be very hot.

.Due to fast freezing, ice cubes may appear "Cloudy". This is trapped air in the water and it will not affect quality or taste of ice.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Do not immerse in water

GUARANTEE FORM

Thank you for choosing our Electric Appliance.

We offer one year conditional guarantee on this product from the date of purchase.

However, please note this guarantee is valid for normal condition operation of product. Any damaged of product due to user mis-use or careless handling, we will not responsible for any guarantee.

Model no. :	(Lot no.)
Product name :	
Date of Purchase :	
Place of Purchase :	
Note : Please fill details in this form and keep your official purchase receipt together with this Instruction manual.	